

### Mobile Harbour Crane

<b>A</b>	HOIST ROPE <b>Superlift 35V2</b>	<b>B</b>	BOOM HOIST ROPE <b>Superlift 8V2</b>
	ROPE PAIRS <b>Superlift 8V2</b>		

### Unloader Crane

<b>A</b>	HOIST ROPE <b>Superlift 8V2</b>	<b>B</b>	BOOM HOIST ROPE <b>Superlift 8V2</b>
<b>C</b>	GRAB CLOSING ROPE <b>Superlift 8V2</b>	<b>D</b>	TROLLEY ROPE <b>Superlift 8V2</b>

### Offshore Pedestal Crane

<b>A</b>	MAIN HOIST ROPE <b>Superlift 35V2</b>	<b>B</b>	AUXILIARY HOIST ROPE <b>Superlift 35V2</b>
<b>C</b>	BOOM HOIST ROPE <b>Superlift 8V2</b>		

### Steel Mill Ladle

<b>A</b>	MAIN HOIST ROPE <b>Superlift 8V2</b>	<b>B</b>	AUXILIARY ROPE <b>Superlift 8V2</b>
----------	---	----------	--

### Overhead Gantry Crane

<b>A</b>	HOIST ROPE <b>Superlift 8V2</b>
----------	------------------------------------

### Harbour Crane

<b>A</b>	HOIST ROPE <b>Superlift 35V2</b>	<b>B</b>	BOOM HOIST ROPE <b>Superlift 8V2</b>
----------	-------------------------------------	----------	---

### Mobile Lattice Boom Crane

<p><b>A</b> MAIN HOIST ROPE <b>Superlift 35V2</b></p> <p>ROPE PAIRS <b>Superlift 8V2</b></p>	<p><b>B</b> BOOM HOIST ROPE <b>Superlift 8V2</b></p> <p><b>C</b> AUXILIARY HOIST ROPE <b>Superlift 35V2</b></p>
--	---

### Tower Crane

<p><b>A</b> HOIST ROPE <b>Superlift 35V2</b></p>	<p><b>B</b> PENDANT ROPE <b>Superlift 8V2</b></p> <p>TROLLEY ROPE Superlift 8V2 Superlift 35V2</p>
--	--

### Telescopic Mobile Crane

<p><b>A</b> MAIN HOIST ROPE <b>Superlift 35V2</b></p>	<p>AUXILIARY HOIST ROPE <b>Superlift 35V2</b></p>
---	---

### Container Crane

<p><b>A</b> HOIST ROPE <b>Superlift 8V2</b></p> <p><b>C</b> TROLLEY ROPE <b>Superlift 8V2</b></p>	<p><b>B</b> BOOM HOIST ROPE <b>Superlift 8V2</b></p>
---	--

### Gantry Crane

**A** HOIST ROPE  
**Superlift 8V2**

### Piling Crane

**A** PILING RIG HOIST ROPE  
**Superlift 35V2 Superlift 8V2**  
(regular lay)

**To be used as a guide only**, contact us if your installation has not been shown here or you need technical support. We will recommend the best rope for your application.

**WARNING:** wire rope will fail if misused, overloaded, damaged, worn out, improperly maintained or abused. Wire rope failure may cause injury or death. Correct installation & tensioning methods are imperative to performance & rope life.